

Cartridge Change Instructions for the CUNO SGLP-2 Dual RO System, Extended Life

1. Close inlet water valve to the unit. (A on diagram)
2. Close coffee water valve. (B on diagram)
3. Close both (2) tank shut off valves. (C & D on diagram)
4. Hold bucket under sample valve in the water line to the outlet water line to the coffee/espresso (E on diagram). Open sample valve in the outlet water line to the coffee / espresso to relieve water pressure in the system.
5. Remove the pre filter (HF27 Cartridge, F on diagram) by turning ¼ turn to the left (counterclockwise) and pulling down, this cartridge has an automatic shut off built into the head.
6. Discard old cartridge.
7. Remove the red cap from the new cartridge (HF37) and moisten the o-rings with water.
8. Install new cartridge (HF37) by inserting cartridge into the head and turning ¼ turn to the right (clockwise).
9. Repeat steps 5 – 7 to replace the TDS Adjustment (T), (G on diagram), and Cyst cartridge (HF20) (H on Diagram).
10. **CAUTION- DO NOT CONFUSE THE PLACEMENT OF THE HF37 AND THE HF20 CARTRIDGE.**
11. Hold bucket under sample valve in the coffee/espresso water line (E on diagram) and open the inlet water valve to the unit (A on diagram).
12. Flush the water through the system until there is a steady flow of water out of the sample valve in the coffee/espresso water line (E on diagram).
13. Close sample valve (E on Diagram).
14. Open coffee water valve (B on diagram).
15. Open both (2) tank valves (C & D on diagram).

